

FIRMWARE UPGRADE INSTRUCTIONS



Important

1. **Read ALL the instructions prior to beginning the upgrade operation. DO NOT perform any functions that are not outlined in this instruction guide.** After you have read the instructions, if you do not fully understand any steps or processes, please contact us at 888.588.2567 and we will provide you with step by step instruction to perform the upgrade of your unit.
2. Before performing the upgrade, ensure 12V DC power supply to the iLink is uninterrupted. If power is interrupted during the upgrade, the unit will become permanently damaged.
3. During the upgrade process, do not attempt any other operations. If the unit is disturbed during the upgrade procedure, the unit will become permanently damaged.

Upgrade Procedure:

1. Switch OFF the power switch on the iLink.
2. Store the upgrade file (VLINKI2.ROM) to your iPod or USB device in the root directory.
3. Connect the IPOD or USB device to your iLink
4. Switch ON the power switch on the iLink
5. Press the SETUP key, navigate to the PREFERENCES menu.
6. Navigate to UPGRADE MODE and select YES.
7. Press the SETUP key to exit the setup menu.
8. **The firmware upgrade will now automatically begin. DO NOT DISTURB THE UNIT.** The screen will display the iLink background screen and the words ERASE and WRITE will flash in the upper left corner, this is normal.

The upgrade takes approximately 2 minutes to complete. Once the firmware upgrade is complete, the system will turn off.

9. Switch OFF the power switch on the iLink.
10. Disconnect the iPod or USB device.
11. Remove the upgrade file (VLINKI2.ROM) from your iPod or USB device.
12. The upgrade is finished. Keep the upgrade file in a safe place or properly dispose of it. Do not store it on your iPod or USB device.